


TRUS-T-LIFT DIMENSIONS

- SPECIFICATIONS:**
- 34" x 54" LIFT PLATFORM
 - 48" x 54" FOOTPRINT
 - 72" HEIGHT
 - 0" - 52" LIFT RANGE
 - MAXIMUM LOAD 550 lbs.
 - 8 FEET/MINUTE LIFT SPEED
 - SCREW NUT WORM GEAR DRIVE
 - MOTOR: 1/2 H.P. 110V A.C.
 - POWER SUPPLY: 110V/1PH/60HZ C/W 15A FUSED DISCON.
 - NON-LOAD BEARING BACKUP SAFETY NUT ON LIFT SHAFT
 - SAFETY HANDRAIL ON CARRIAGE
 - ZERO-LOAD START IN BOTTOM POSITION


NOTES:
 - Dimensions are in inches

TOTAL TRAVEL	52	INCHES	No. OF LANDINGS	2
LOCATION	UNENCLOSED TRUS<T>LIFT SAMPLE DRAWING			
ARCHITECT				
GENERAL CONTRACTOR				

<p>TRUS LIFT CORP.</p>		<p>TRUS-T-LIFT ELEVATOR INSTALLATION DETAILS AND SPECIFICATIONS</p>	
DWN. BY:	B. H	DATE:	10/28/04
CHECKED BY:		DRAWING No.	52URLUNNN
SCALE:	N.T.S.	REV	1/2 A

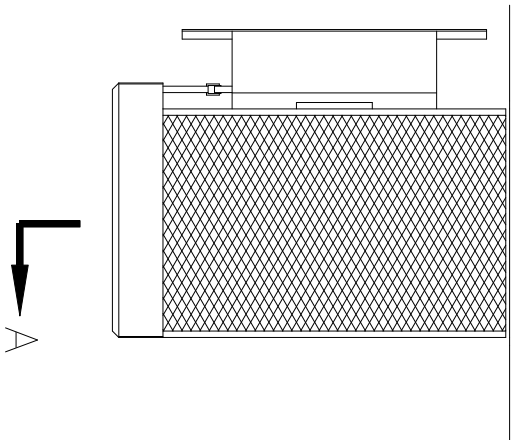

PLAN VIEW SECTION

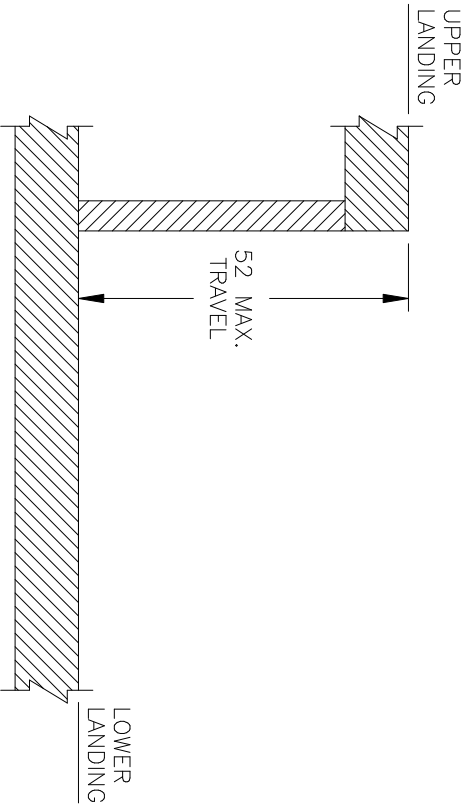

SECTION A

TOTAL TRAVEL	52	INCHES	No. OF LANDINGS	2
--------------	----	--------	-----------------	---

LOCATION UNENCLOSED TRUS<T>LIFT SAMPLE DRAWING

ARCHITECT

GENERAL CONTRACTOR

DWN. BY: B. H

CHECKED BY:

SCALE: N.T.S.



TRUS-T-LIFT ELEVATOR
INSTALLATION DETAILS
AND SPECIFICATIONS

DATE: 28/10/04

DRAWING No. 52URLUNNN

REV 2/2 A